

# MANAGEMENT SYSTEMS

## UPS SUPERVISION AND CONTROL SYSTEMS



# UPS MANAGEMENT GUIDE

On its own, a UPS is unable to guarantee total protection of the data processing systems it powers. This is due to several factors, amongst which:


- Batteries do not have unlimited autonomy
- Unexpected load connections, such as stoves and vacuum cleaners, can cause overloads which annul the protection provided by the UPS.
- Installation in unmanned areas such as EDP rooms and basements or round-the-clock operations can make alarm reception difficult or impossible. This consequently put critical equipment at risk.

Moreover, since the systems can be extremely costly to repair, also owing to the time relevant downtime, it is easy to understand the importance to equip a UPS with a supervision system able to inform the user of the imminent danger and automatically proceed with a series of actions to protect the data and the operating systems.

Legrand offers 2 solutions for the UPS supervision according to the type of installation and the management method:


## “Software” solution

The Management is performed by the software installed on the PC or server to protect. This solution is recommended for small installations where the UPS is installed close to PC or server.

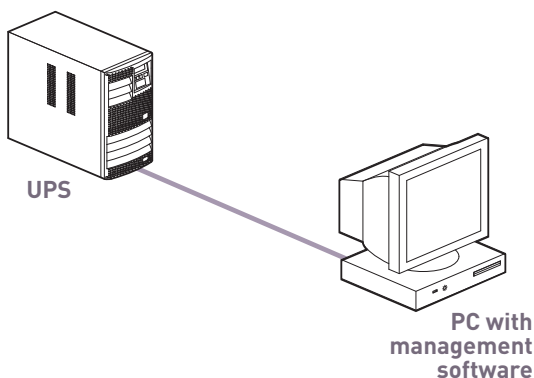


## “Hardware + software” solution

The System is made by a set of communication accessories and software allowing to perform more extended supervision, direct or remotely by INTERNET.

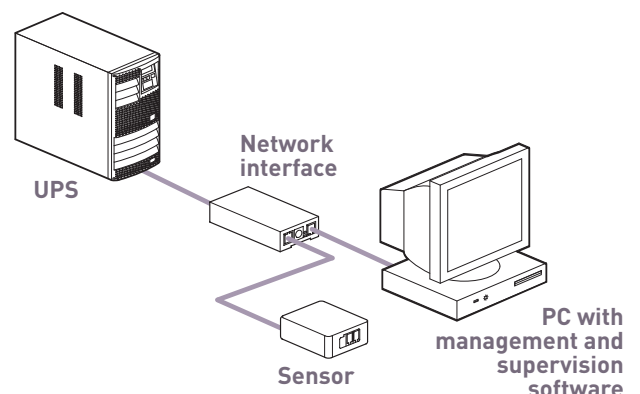

# SELECTION GUIDE

The following diagram shows how is possible to choose the best configuration for your needs:

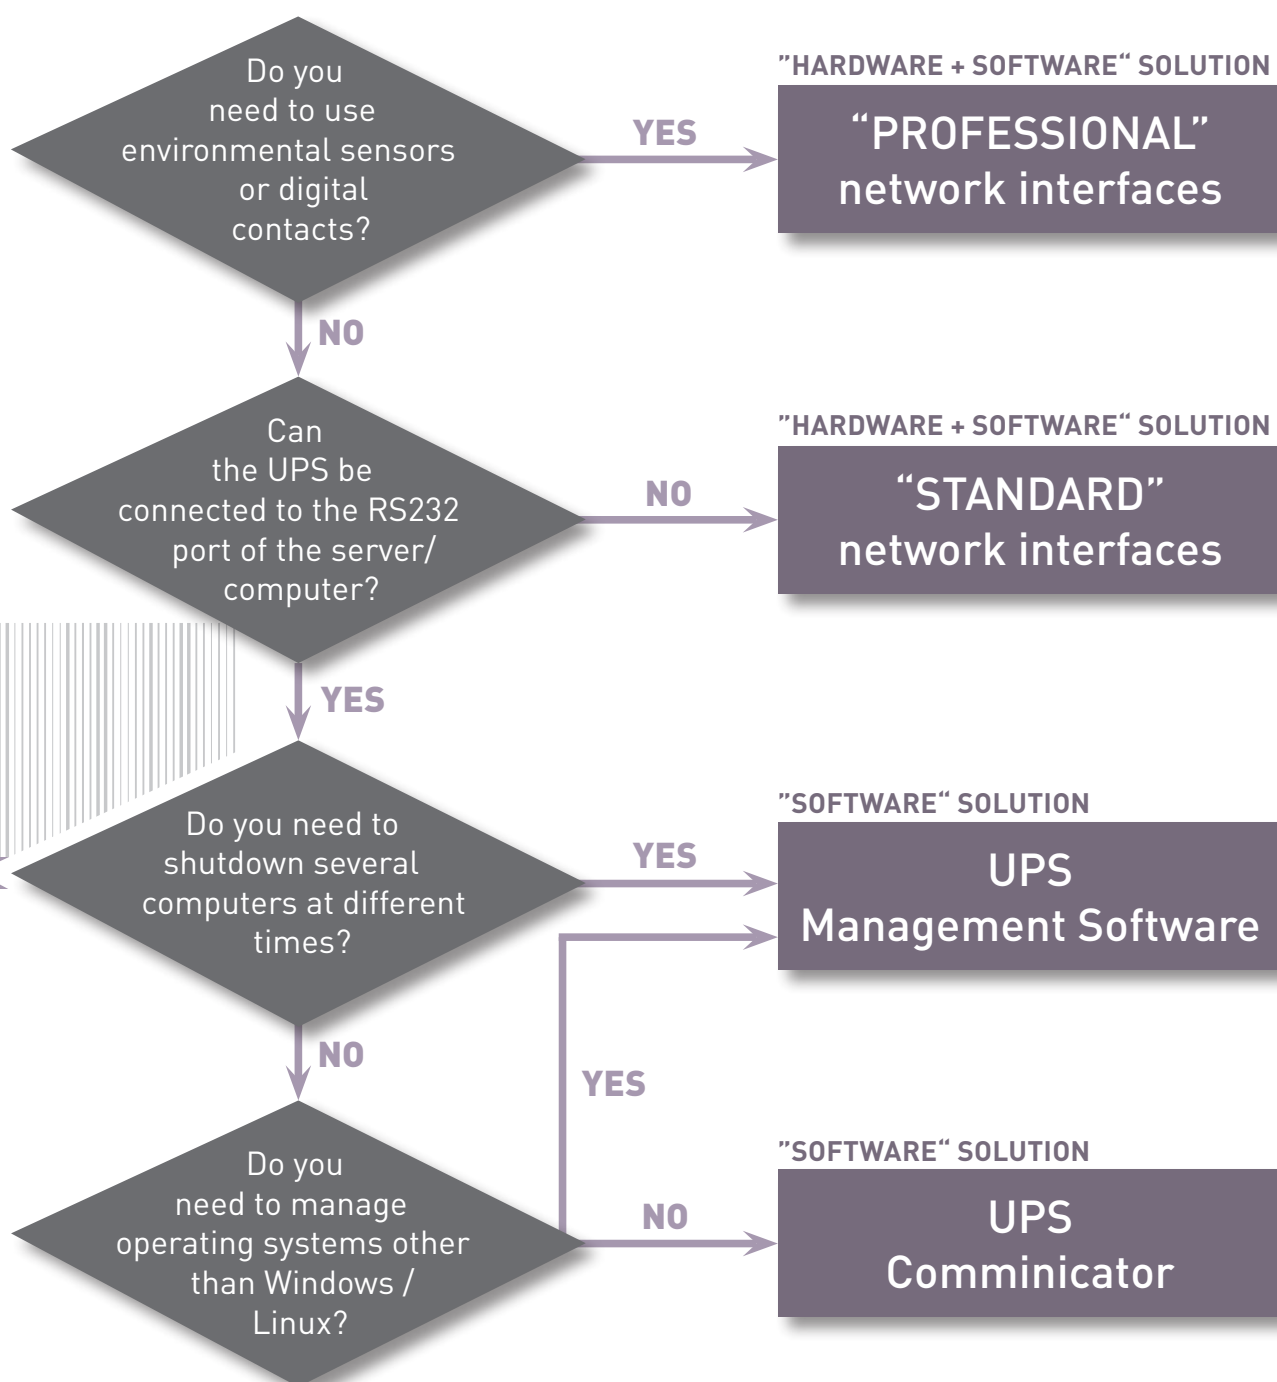 

# MANAGEMENT SOFTWARE

The management software provides two main functions:

- UPS management and control: UPS Communicator and UPS Management Software;
- UPS supervision (monitoring and remote control): RCCMD, UNMS.



## UPS COMMUNICATOR

Free download from [www.ups.legrand.com](http://www.ups.legrand.com). It comprises a group of applications that continually monitor UPS operation and protect the operating systems of the computers powered by the UPS itself.

The client/server structure makes it extremely flexible, efficient, simple to use and "light" when it comes to required system resources. Compatible with all Windows operating systems (98 and more recent) and with all Linux distributions.

**UPS Communicator includes the following main modules:**

### UPS SERVER:

 
Server module for UPS management through the RS232 link. This server module can control numerous events (power failure, overload, bypass, internal faults, etc..) and is able to carry out lots of actions for each one (data registration in the log file, transmission of pop-up messages, e-mail transmission, program execution, local and remote shutdown, etc..).

### UPS DIAG MONITOR:

Graphic interface which, after connection to the UPS Server module, allows to access the operating data of the UPS, make a complete diagnosis, program special functions and perform tests.

### RS SYSTEM:

Agent for executing commands on remote computers (shutdown, customised commands, pop-up messages) via the TCP/IP protocol.

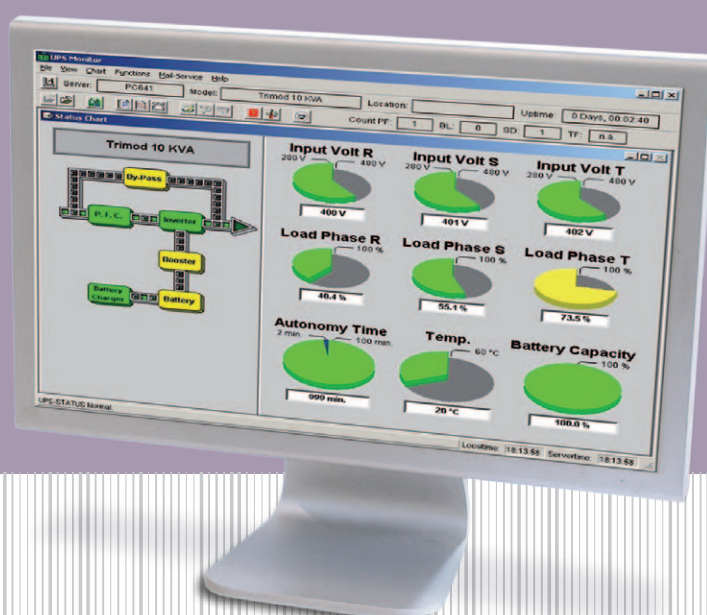

# UPS MANAGEMENT SOFTWARE

This is a paid version, supplied on CD-Rom. It comprises a group of applications that permanently monitor UPS operation and protect the operating systems of the computers powered by the UPS itself. The client/server structure makes it extremely flexible, efficient, simple to use and "light" when it comes to required system resources.

Compatible with all the main operating systems, even in different architecture (Intel, Alpha, Itanium, etc...): Windows 2000 and more recent, Linux, Unix, Novell Netware and Mac OS X 10.x. and Includes one RCCMD license for executing commands on an additional PC. The upgrades can be downloaded from the website [www.ups.legrand.com](http://www.ups.legrand.com).

## UPS Communicator includes the following main modules:

### UPSMAN:

Server module for UPS management through the RS232 link. This module can control numerous events (power failure, overload, bypass, internal faults, etc..) and is able to carry out lots of actions for each one (data registration in the log file, transmission of pop-up messages, e-mail transmission, program execution, local and remote shutdown, etc...), also at different times.

### UPSMON:

graphic interface which, after connection to the UPSMAN module, allows you to access the main operating data of the UPS and perform tests.

# SUPERVISION SOFTWARE (MONITORING AND CONTROL)



## UPS RCCMD

This software enables a computer to receive and execute, via the TCP/IP protocol, the following remote commands transmitted by the UPS management systems:

- Shutdown of the operating system;
- Display of pop-up messages;
- Execution of customised programs (.COM, .EXE, .BAT, .CMD) with the relative options.

 
All the commands received are recorded in a log file.

Execution of these commands depends on an authorization control: the commands are only accepted if the UPS that transmitted them is part of an authorization list.

A "redundancy" list can be created, i.e. a command will only be executed if it has been transmitted by several UPS (e.g. to shutdown computers with redundant powering on two or more UPS).

The software is compatible with 99% of the operating systems currently available on the market (including the AS/400 systems and virtualization systems like VMware) and is also available for different types of architecture (e.g. Intel, PowerPC, Alpha processors).

Compatible with: UPS Management Software, CS121 (all models), SiteSwitch 4 (only the SS4 model).

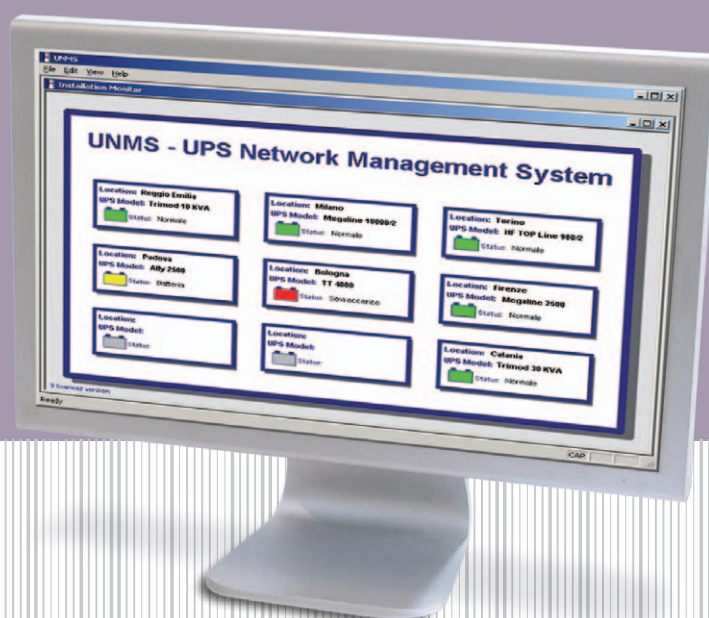

# UPS UNMS

UNMS (UPS Network Management System) is a WEB based application that can continuously monitor the status of all the UPS installed in one or more locations by means of the UPS management systems (CS121, UPS Supervisor , SNMP) and the TCP/IP protocol.

All the alarm signals generated by the various UPS are received by the monitoring station. That allows to achieve an immediate and thorough diagnosis of the problem and allow the technical assistance service to act urgently if needed.

The operating status of each UPS is represented by a traffic light icon. In case of anomaly, the icon of the UPS in the alarm status changes colour, depending on the seriousness of the fault. The control program sends pop-up messages, e-mail and runs customised programs.

The monitoring function of the UPS concerned can be accessed with an Internet browser and a simple click on the mouse.

The SNMP protocol's support allows this application to be used with different brands of UPS, as long as they are compatible with the MIB RFC 1628 specifications.

The system also allows the graphic interface to be customised, memorising of all alarms received in a database for research purposes and can display graphs showing the trend of the main operating parameters of the UPS.

The basic version is free of charge and it allows to manage up to nine UPS at the same time (a maximum of 3 UPS can be of different brands).

UNMS is available for Windows XP Pro and and more recent.

# COMMUNICATION AND MANAGEMENT ACCESSORIES

The communication accessories can be classified in:

- Network interface (Standard, Professional and Industrial)
- Control unit for load management with independent output
- Sensors for environmental and mechanical monitoring

## NETWORK INTERFACES



They are special network devices designed to autonomously manage UPS. External software is not required: a 32-bit processor resides in the board along with an operating system of the "UNIX Embedded" type which is able to continuously monitor the operation of the UPS, handle lots of events (power failure, overload, bypass, faults,...).

The network interfaces are available in external and internal version. The internal version can be installed in a dedicated slot inside the UPS. The Professional and Industrial versions have programmable digital contacts and additional RS232/RS485 communication ports. All network interfaces include an RCCMD license for executing commands on additional PC.

The firmware can be upgraded using specific software package available for free at [www.ups.legrand.com](http://www.ups.legrand.com).

Main functions :

- Event log with date and time;

- Memorising the trend of the main operating data, complete with date and time;
- E-mail transmission;
- Accomplishment of scheduled actions;
- Displaying pop-up messages, shutdown and customised commands on remote computers;
- Transmission of SNMP trap messages;
- Turning the UPS off and on;
- Transmitting Wake On LAN (WOL) signals;
- Compatible with SNMP protocol and the main types of operating software (HP OpenView, IBM Tivoli, etc...);
- Data and configuration display via the Internet browser (Internet Explorer, Mozilla Firefox, Opera, etc...) or Telnet;
- 10/100Mbit Base-T Ethernet link (half-duplex and full-duplex) with self-recognition function;
- DHCP Function.

# LOAD MANAGEMENT CONTROL UNIT



This device is used to control the energy distribution, enabling all the loads connected to it to be switched on/off individually, via four separate power supply outputs. For example, if there is a power failure, a UPS can send a command to switch off the least important loads (such as laser printers) in order to provide a longer backup time for critical equipment. When the power supply is restored, the UPS can send a command to switch these loads back on.

The 5 LEDs on the front panel can be used to check the status of the main power supply and of each output. Supplied with brackets for installation in 19" rack cabinets. The unit is available in two versions: Standard and Professional.

# SENSORS



The range consists of two different types of sensors, according to the type of connection to the UPS.

Some sensors are available for the direct connection to the network interfaces while others must be connected to the SENSOR MANAGER.

The available types of sensors are:

## FOR NETWORK INTERFACE

 
- temperature sensor
- temperature and humidity sensor
- reed switch and magnet sensor

## FOR SENSOR MANAGER

- temperature sensor
- temperature and humidity sensor
- reed switch and magnet sensor
- flashing illuminated signal.

The sensor manager is a device that allows the connection of several types of sensors to the UPS. It is able to manage up to 8 analog inputs, 4 digital inputs and 4 digital outputs.

Thanks to the configuration functions "Scale" and "Off set" it can be used with any analog setup.

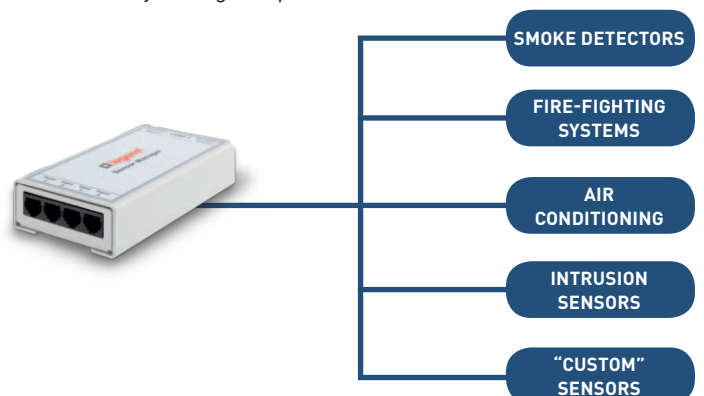


# UPS MANAGEMENT TYPES

## LOCAL PROTECTION

To protect a single computer (server or workstation) and its relative peripherals, it is enough to use an RS232 or USB connection and install the operating software in the system that must be protected.

If the computer is linked to an IP network, it is possible to receive alarm signals from the UPS as pop-up and e-mail messages, while the operating data can be graphically displayed via specific monitoring programs.

 The advantage of this type of management is the low cost of the implementation, but the UPS must be positioned near the system to be protected.

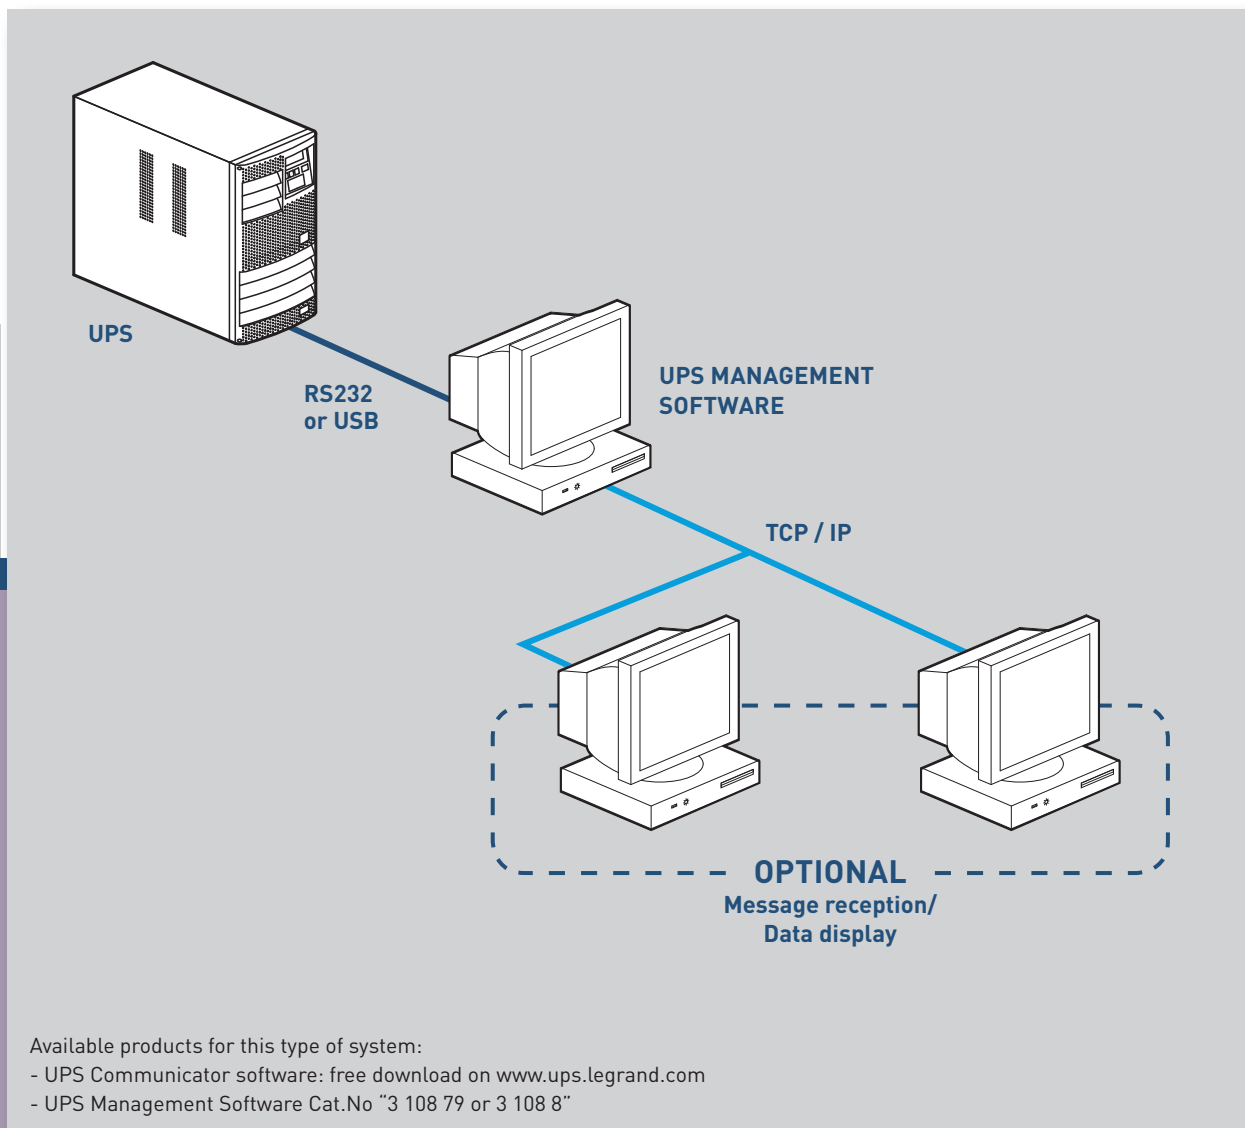


Available products for this type of system:

- UPS Communicator software: free download on [www.ups.legrand.com](http://www.ups.legrand.com)
- UPS Management Software Cat.No "3 108 79 or 3 108 8"

## EXTENSION OF THE LOCAL PROTECTION

 In case of several computers to manage, the previously described solution can be used with a special software "agent" installed on the other computers. This special software will then receive and run the commands transmitted by the computer interfaced with the UPS.

Here again, the implementation costs are very low, but the management system is completely inhibited when the computer interfaced with the UPS is shutdown (fault, maintenance, upgrading, etc...). If this happens, it will no longer be able to receive the alarm signals and will endanger the remaining computers.

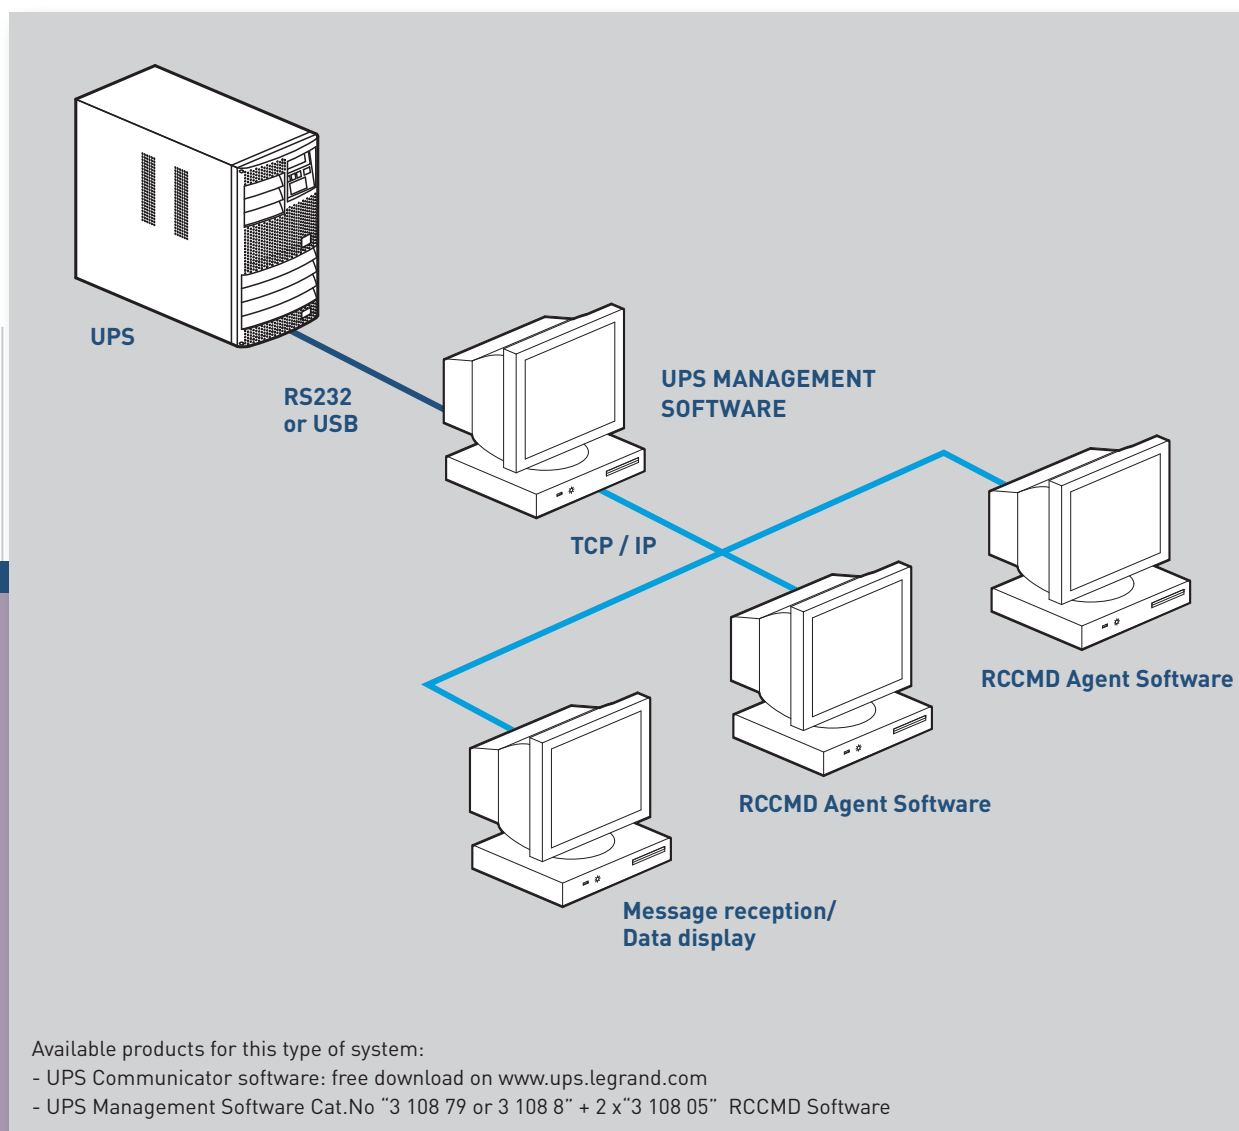


# UPS MANAGEMENT TYPES

## IP NETWORK INTEGRATION

For this type of installation, the UPS must be connected to a special network interface on which the management software was installed. The network board is then connected to the IP network. Since the UPS is directly linked to the UPS network, its management system can send e-mail and pop-up messages, shutdown and restart the computers again. Protection for the various computers is guaranteed by equipping them with RCCMD software that receives commands from the network interface of the UPS. There are lots of advantages with this solution:

 - The UPS can even be installed at a distance from the systems it must protect;
- The entire management no longer depends on one single computer, effectively guaranteeing that all the devices connected are protected;
- The data can be displayed via any WEB browser without need of dedicated software.

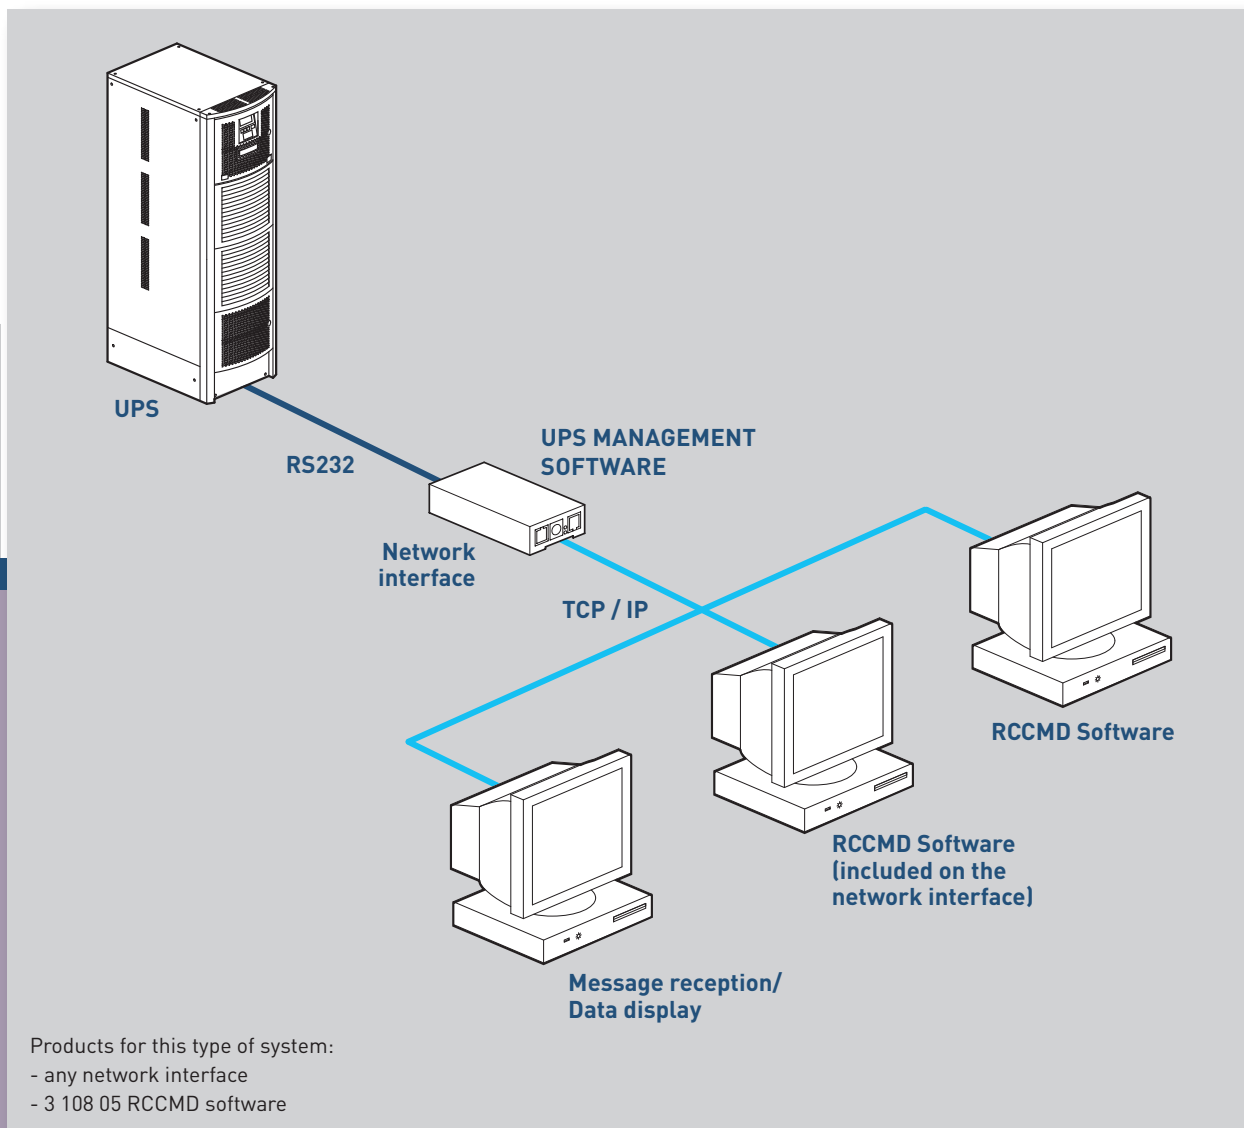

## MANAGEMENT OF SEVERAL UPS

 
This solution requires a software application that continuously monitors a high number of UPS installed either locally or at remote locations.

All the alarms generated by the UPS through their respective management systems are received, via the IP network, by this application, which memorises them in a database and transmits a series of e-mail and pop-up messages to the operators. They are able to identify rapidly the UPS that generated the alarm (via a web browser) and to make a complete and efficient diagnosis.

A Bank is a typical example of how this application can be used:

- Each branch has a UPS monitored by one of the previously described management systems, which controls and protects the local network;
- The various different local networks are linked to each other permanently;
- The monitoring station that continuously controls all the UPS is installed in the headquarters.

The advantage of this solution is the standard monitoring system which allows to manage UPS without having to know their IP address.

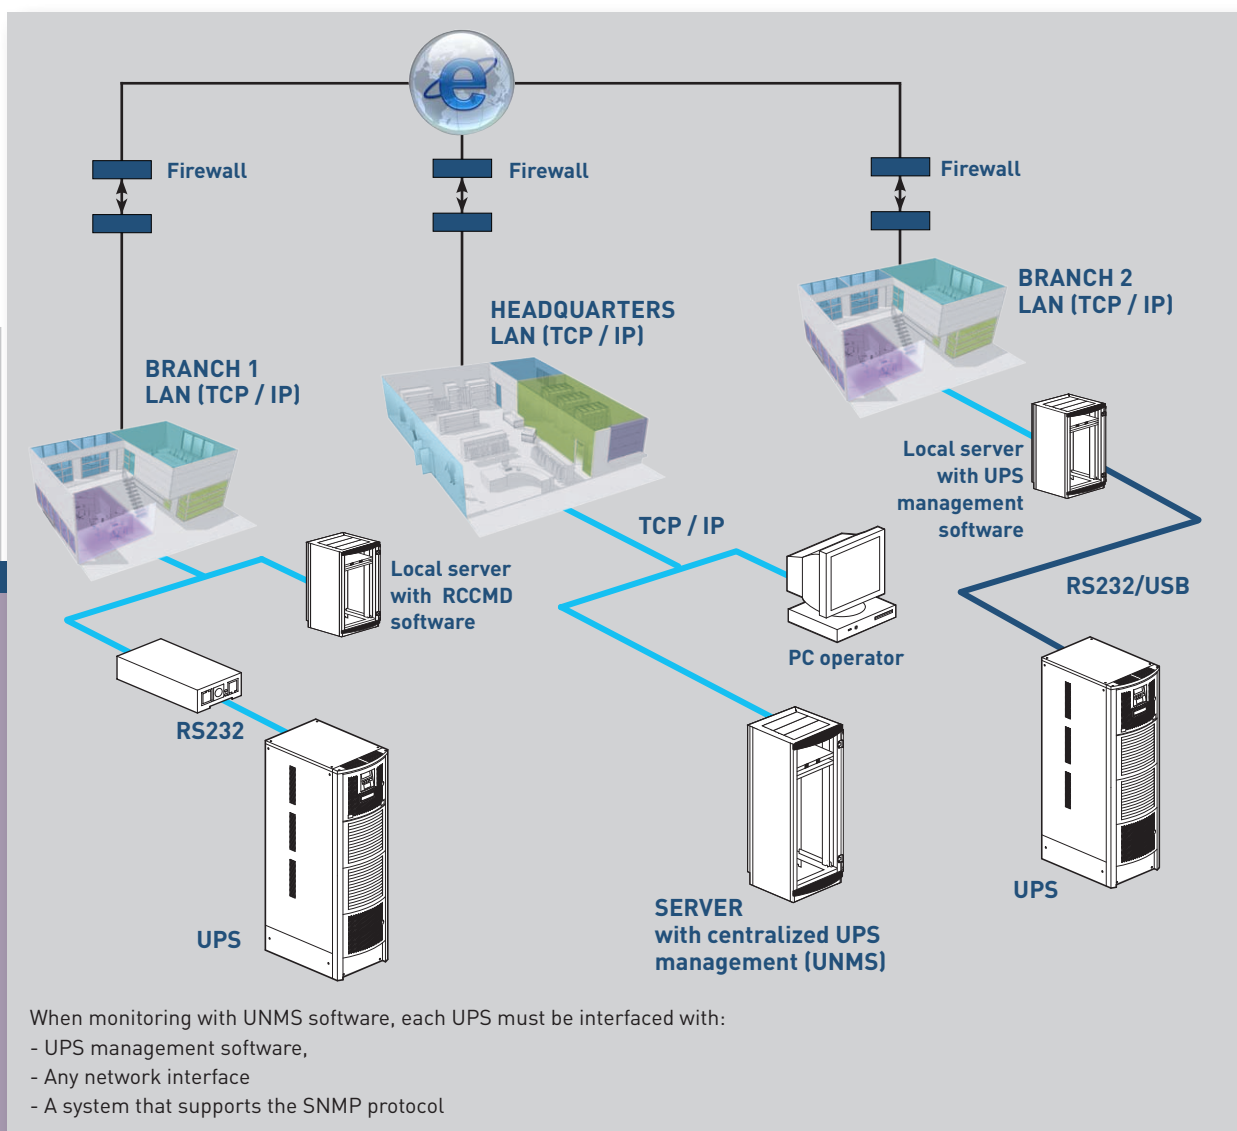

# UPS MANAGEMENT TYPES

## ENVIRONMENTAL MONITORING


There are applications which require both UPS and environmental monitoring.

CS121 / CS121 SK network interface allow to monitor temperature and humidity using special sensors.


Within environmental monitoring is also possible to set threshold values and program relevant job to execute as: sending e-mail, pop-up message, remote computer command, shutdown, etc.

For installations with more than one sensor, the Sensor Manager, installed between the network interface and the different sensors, allows connection of up to 8 units.

### MONITORING OF ONE SINGLE SENSOR

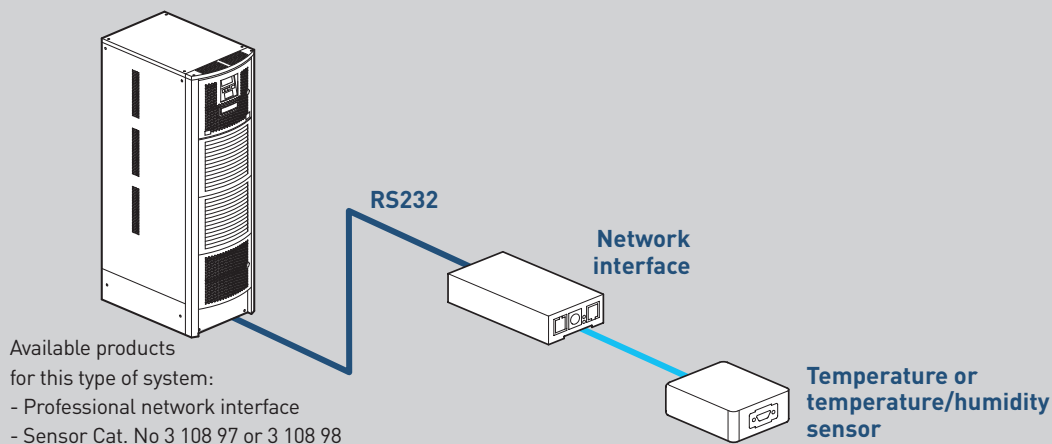


### MONITORING OF SEVERAL SENSORS

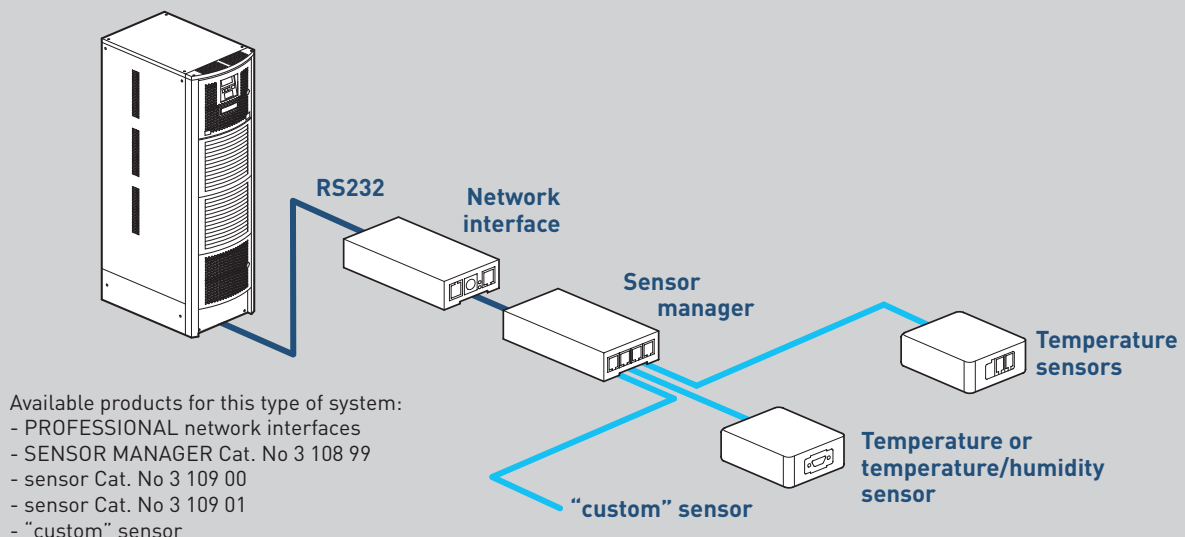 

The different values measured by the sensors are memorised in a dedicated log file and can be displayed or exported for successive analysis and data archiving.


The system can control the status of digital inputs (e.g. microswitches that open doors or fault indicator contacts of conditioning systems), trigger hardware devices (like indicator lights or sirens) and also send e-mail messages and execute commands on remote computers.

### MONITORING OF DIGITAL INPUTS AND CONTROL OF HARDWARE DEVICES

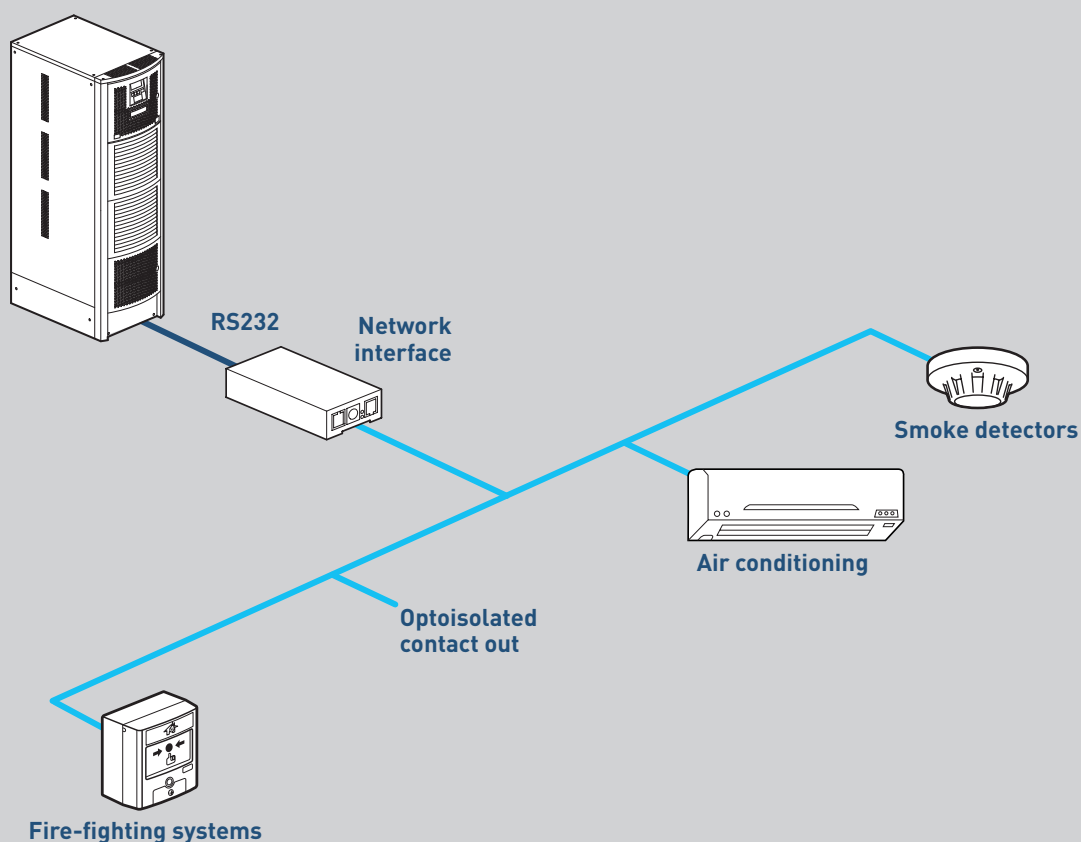

Available products for this type of system:  
 - network interface Professional or Industrial

# SOFTWARE

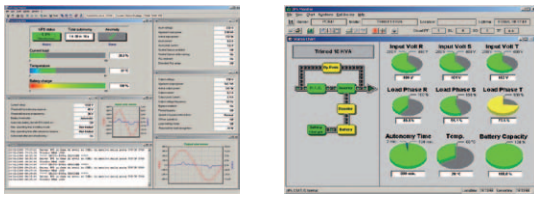


Model	Cat. Nos.	SOFTWARE DESCRIPTION
UPS Communicator	free download	Management software
UPS Management Software	3 108 79	Management software
UPS Management Software	3 108 80	Management software Includes an RS232/USB converter.
RCCMD	3 108 85	Multi-OS RCCMD licence
RCCMD	3 108 86	Pack of multi-OS RCCMD licences
RCCMD	3 108 87	Pack of 10 multi-OS RCCMD licences
RCCMD	3 108 88	Pack of 25 multi-OS RCCMD licences
RCCMD	3 108 89	Pack of 50 multi-OS RCCMD licences
RCCMD	3 108 90	RCCMD licence for AS/400 (minimum release: V5R3M0)
UNMS	3 108 91	UNMS licence for 25 UPS
UNMS	3 108 92	UNMS licence for 50 UPS
UNMS	3 108 93	UNMS licence for 150 UPS
UNMS	3 108 94	UNMS licence for 250 UPS
UNMS	3 108 95	UNMS licence for 500 UPS
UNMS	3 108 96	UNMS licence for 1000 UPS

Examples of types of UPS management and communication that can be created with software and hardware


## LOCAL PROTECTION

Protects and controls a single station (PC or server) which must be located less than 12 metres away.

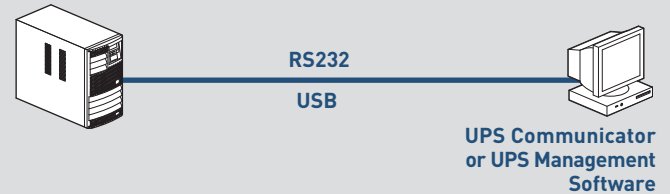


## EXTENDED LOCAL PROTECTION

Protects a larger number of stations (PC or server) but they are all controlled by the station which is directly connected to the UPS.

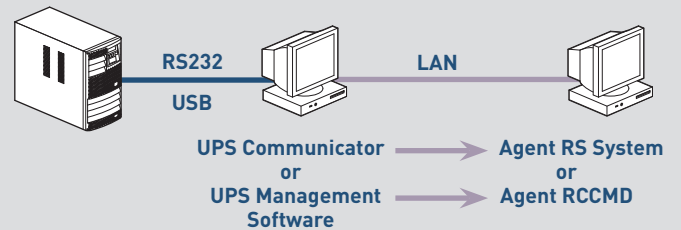


## PROTECTION VIA TCP/IP NETWORK

 Enables control of all the stations that can communicate with the network interface. The management of the system can be supervised by all licensed users.

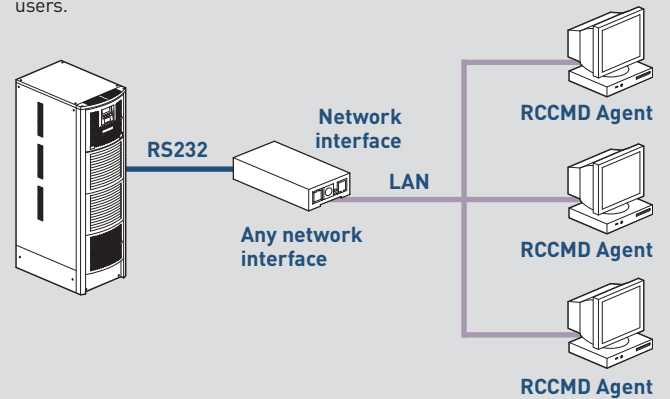

## CENTRALISED PROTECTION

Using the UNMS supervision software, it is possible to control all the UPS connected to a TCP/IP network.

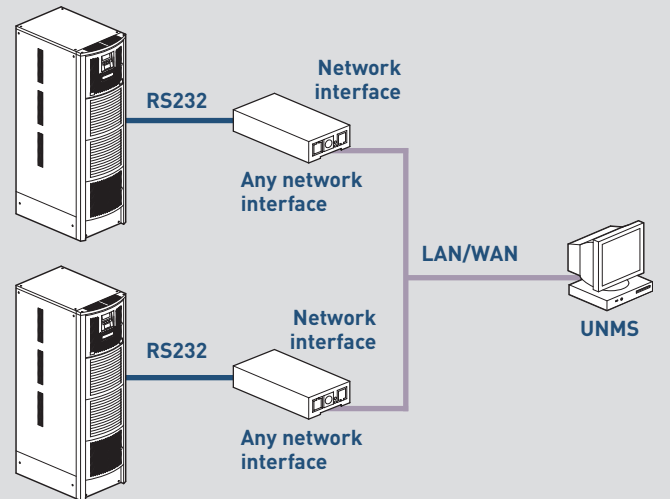


# NETWORK INTERFACES



3 108 84



3 109 06

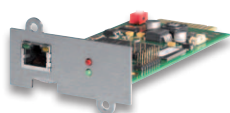


3 108 82



3 109 07

Model	Cat.Nos.	NETWORK INTERFACE
		DESCRIPTION
CS121 SK	<b>3 108 81</b>	PROFESSIONAL network interface, internal version (card)
CS121B SK	<b>3 108 82</b>	STANDARD network interface, internal version (card)
CS121	<b>3 108 83</b>	PROFESSIONAL network interface, external version
CS121B	<b>3 108 84</b>	STANDARD network interface, external version
CS121M	<b>3 109 06</b>	INDUSTRIAL network interface, external version
CS121M SK	<b>3 109 07</b>	INDUSTRIAL network interface, internal version (card)

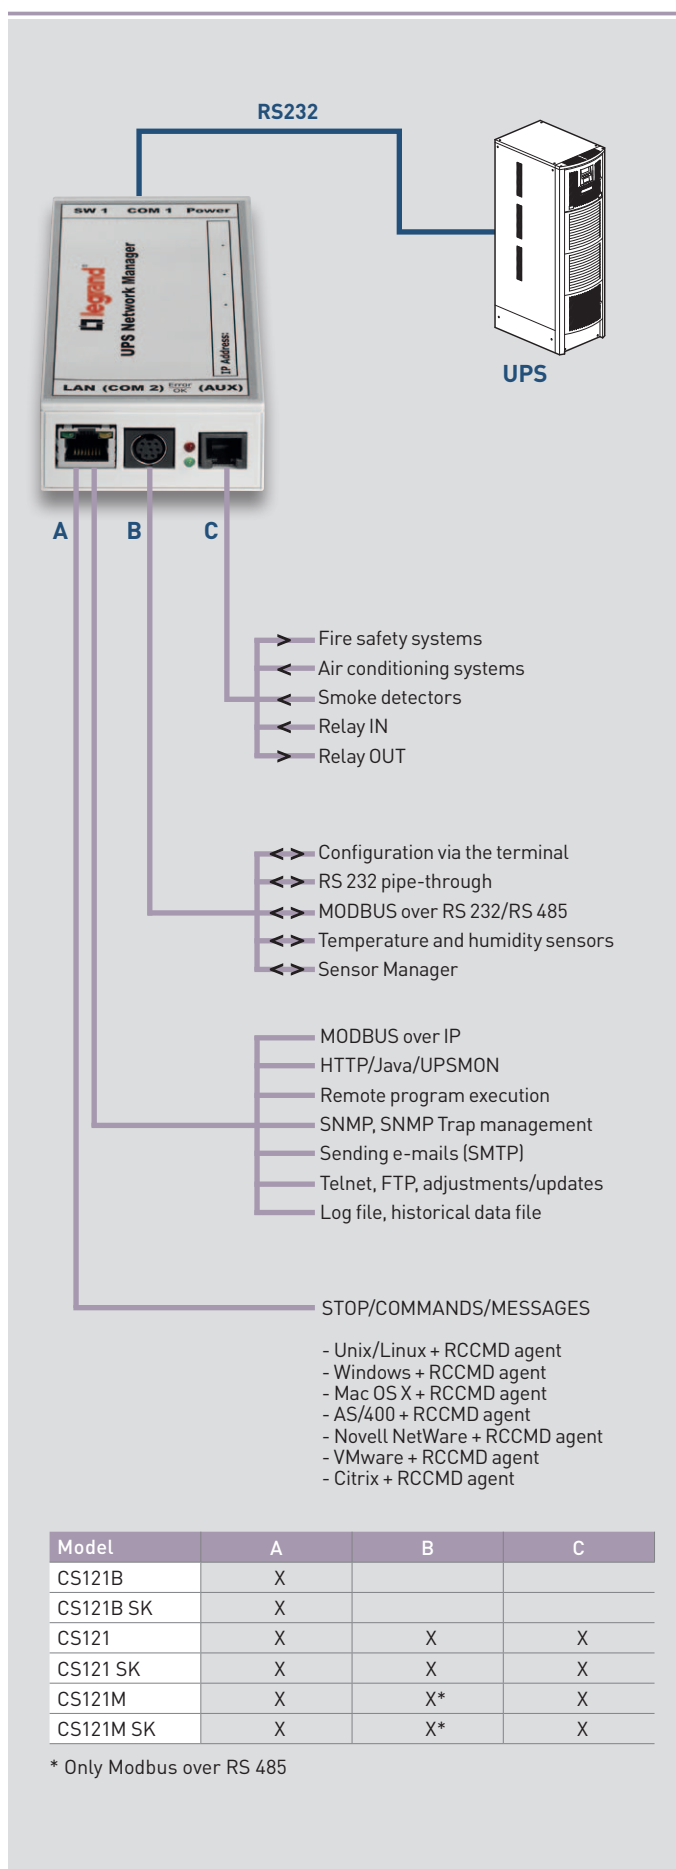 

# LOAD MANAGEMENT CONTROL UNIT (SITESWITCH)



3 109 04


Model	Cat. Nos.	SITESWITCH 4
		DESCRIPTION
SS4	<b>3 109 04</b>	PROFESSIONAL load management control unit
SS4 AUX	<b>3 109 05</b>	STANDARD load management control unit

## SS4

This is the version with the highest performance. It incorporates a network card with receives, via TCP/IP, the commands sent via the CS121 network interface (any model) of the UPS.


This enables the switching point to be installed close to the loads to be supplied and enables the UPS to control a potentially an unlimited number of control units.

The presence of a CS121 SK network interface inside the SS4 also ensures its standalone operation, i.e. without receiving commands from a UPS: it is in fact possible to send commands to computers (via the RCCMD software), program starts and stops, send e-mails and manage sensors from its web interface. It is compatible with the SNMP protocol.

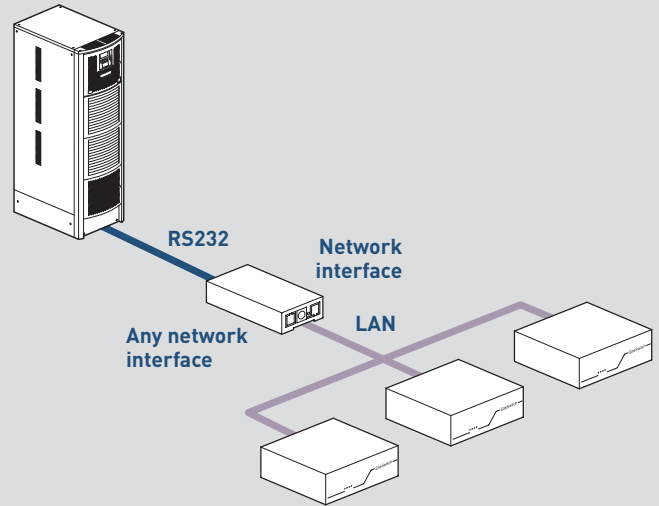

## SS4 AUX

This is the standard solution. It must be controlled by a UPS equipped with a professional or INDUSTRIAL interface. Ideal solution if it is installed close to the UPS (for example inside the same rack cabinet) and in all cases a maximum of 15 metres away.

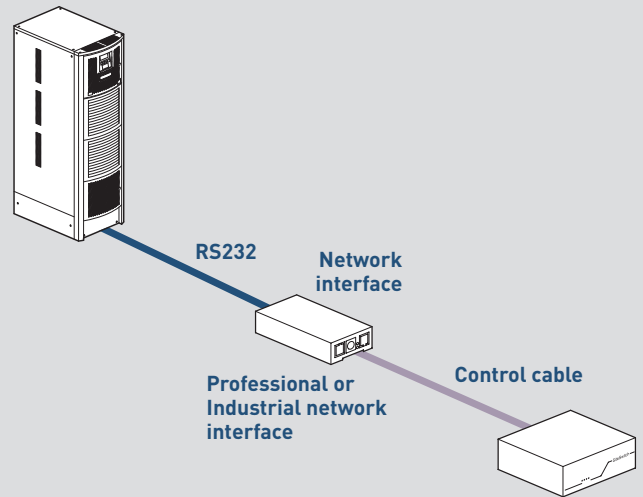


## TECHNICAL CHARACTERISTICS

Type	SS4	SS4 AUX
Supply voltage	230 V/16 A	230 V/16 A
Output sockets	4 x (230 V/8 A max)	4 x (230 V/8 A max)
Management of output sockets	Internal/CS121 (all models)	CS121 (PROFESSIONAL and INDUSTRIAL versions)
Type of connection for management of output sockets	Ethernet 10/100 Mbps	RJ11 cable approx. 5 m (included)
Dimensions (H x W x D) (mm)	60 x 260 x 180	60 x 260 x 180

# SENSORS AND OTHER ACCESSORIES



 Model	Cat. Nos.	SENSORS
		DESCRIPTION
SM_T_COM	3 108 97	Temperature sensor for direct connection to the COM2 port on the CS121 and CS121 SK interfaces and SiteSwitch 4 (SS4 model only). Cannot be used with SensorManager.
SM_T_H_COM	3 108 98	Combined temperature and humidity sensor for direct connection to the COM2 port on the CS121 and CS121 SK interfaces and SiteSwitch 4 (SS4 model only). Cannot be used with SensorManager.
SensorManager	3 108 99	Manager for sensors: connects to the COM2 port on the CS121 and CS121 SK interfaces and SiteSwitch 4 (SS4 model only) and manages up to 8 analogue inputs, 4 digital inputs and 4 digital outputs. The configuration is managed directly by the CS121 interfaces (PROFESSIONAL), described previously. The "Scale Divisor" and "Offset" configuration functions enable SensorManager to be used with any analogue device (see characteristics). It includes 1 "SM_T" temperature sensor.
SM_T	3 109 00	Temperature sensor that can only be used with SensorManager. It enables another "SM_T" sensor to be connected using a special connector.
SM_T_H	3 109 01	Combined temperature and humidity sensor that can only be used with SensorManager.
Door sensor	3 109 02	This consists of a reed switch and a magnet. Compatible with CS121, CS121 SK, CS121 M, CS121M SK and SensorManager.
SM_flash	3 109 03	Flashing illuminated signal. Only compatible with SensorManager.

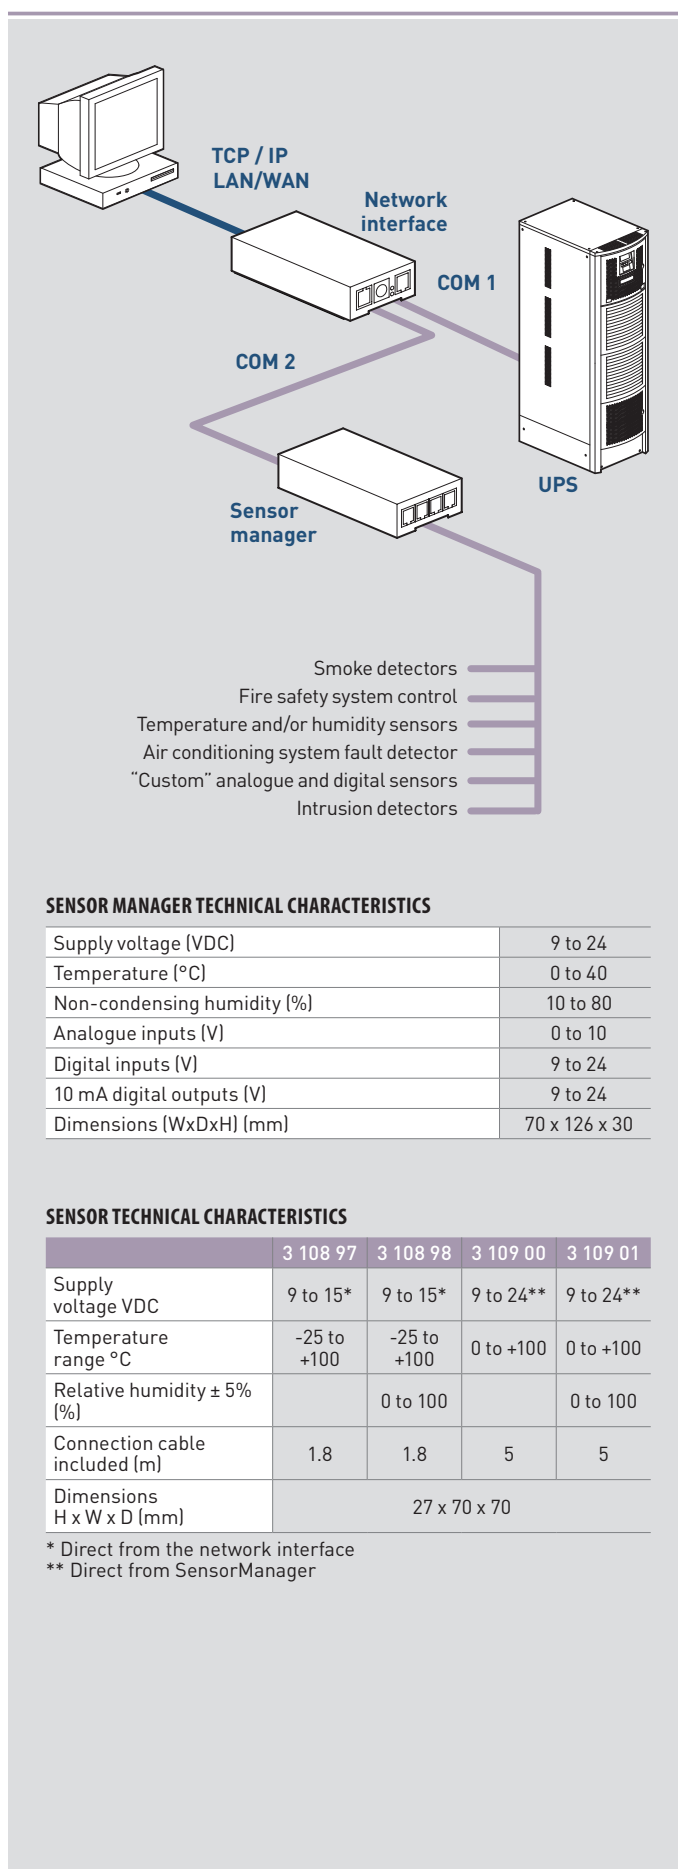

### SENSOR MANAGER TECHNICAL CHARACTERISTICS

Supply voltage (VDC)	9 to 24
Temperature (°C)	0 to 40
Non-condensing humidity (%)	10 to 80
Analogue inputs (V)	0 to 10
Digital inputs (V)	9 to 24
10 mA digital outputs (V)	9 to 24
Dimensions (WxDxH) (mm)	70 x 126 x 30

### SENSOR TECHNICAL CHARACTERISTICS

	3 108 97	3 108 98	3 109 00	3 109 01
Supply voltage VDC	9 to 15*	9 to 15*	9 to 24**	9 to 24**
Temperature range °C	-25 to +100	-25 to +100	0 to +100	0 to +100
Relative humidity ± 5% (%)		0 to 100		0 to 100
Connection cable included (m)	1.8	1.8	5	5
Dimensions H x W x D (mm)	27 x 70 x 70			

\* Direct from the network interface

\*\* Direct from SensorManager



**World Headquarters and  
International Department**

87045 Limoges Cedex - France

☎ : + 33 (0) 5 55 06 87 87

Fax : + 33 (0) 5 55 06 74 55

---

In accordance with its policy  
of continuous improvement, the  
Company reserves the right to change  
specifications and designs without  
notice. All illustrations, descriptions,  
dimensions and weights in this  
catalogue are for guidance and cannot  
be held binding on the Company.